

## Modular Wetlands<sup>®</sup> Linear Operations & Maintenance Manual



# MODULAR WETLANDS LINEAR OPERATION & MAINTENANCE MANUAL

## TABLE OF CONTENTS

Overview .....	3
Safety Notice & Personal Safety Equipment .....	4
Modular Wetlands Linear Components List .....	5
Inspection Summary & Equipment List.....	6
Inspection & Maintenance Notes .....	7
Inspection Process .....	7
Maintenance Indicators .....	9
Maintenance Summary & Equipment List.....	9
Maintenance Instructions.....	11
Replacing Biofiltration Media if Required .....	14
Replacing Drain Down Filter Media (Only on Older California Models) .....	16
Notes .....	17
Inspection Report .....	18
Cleaning & Maintenance Report .....	19

## OVERVIEW

This operation and maintenance (O&M) manual is for the Modular Wetlands Linear Biofilter (MWL). Please read the instructions and equipment lists closely prior to starting. It is important to follow all necessary safety procedures associated with state and local regulations. Please contact Contech for more information on pre-authorized third-party service providers who can provide inspection and maintenance services in your area. For a list of service providers in your area, please visit [www.conteches.com/maintenance](http://www.conteches.com/maintenance).



### WARNING

Confined space entry may be required. Contractor to obtain all equipment and training to meet applicable local and OSHA regulations regarding confined space entry. It is the Contractor's or entry personnel's responsibility to always proceed safely.

## SAFETY NOTICE & PERSONAL SAFETY EQUIPMENT

Job site safety is a topic and a practice addressed comprehensively by others. The inclusions here are merely reminders to whole areas of Safety Practice that are the responsibility of the Owner(s), Manager(s), and Service Provider(s). OSHA and Canadian OSH, Federal, State/Provincial, and Local Jurisdiction Safety Standards apply on any given site or project. The knowledge and applicability of those responsibilities is the Service Provider's responsibility and outside the scope of Contech Engineered Solutions.



Safety Boots



Gloves



Hard Hat



Eye Protection




Maintenance and Protection  
of Traffic Plan

## MODULAR WETLANDS LINEAR COMPONENTS LIST

The MWL system comes in multiple sizes and configurations, including side by side or end to end layouts, both as open planters or underground systems. See shop drawings (plans) for project specific details.

The standard MWL system is comprised of the following components:

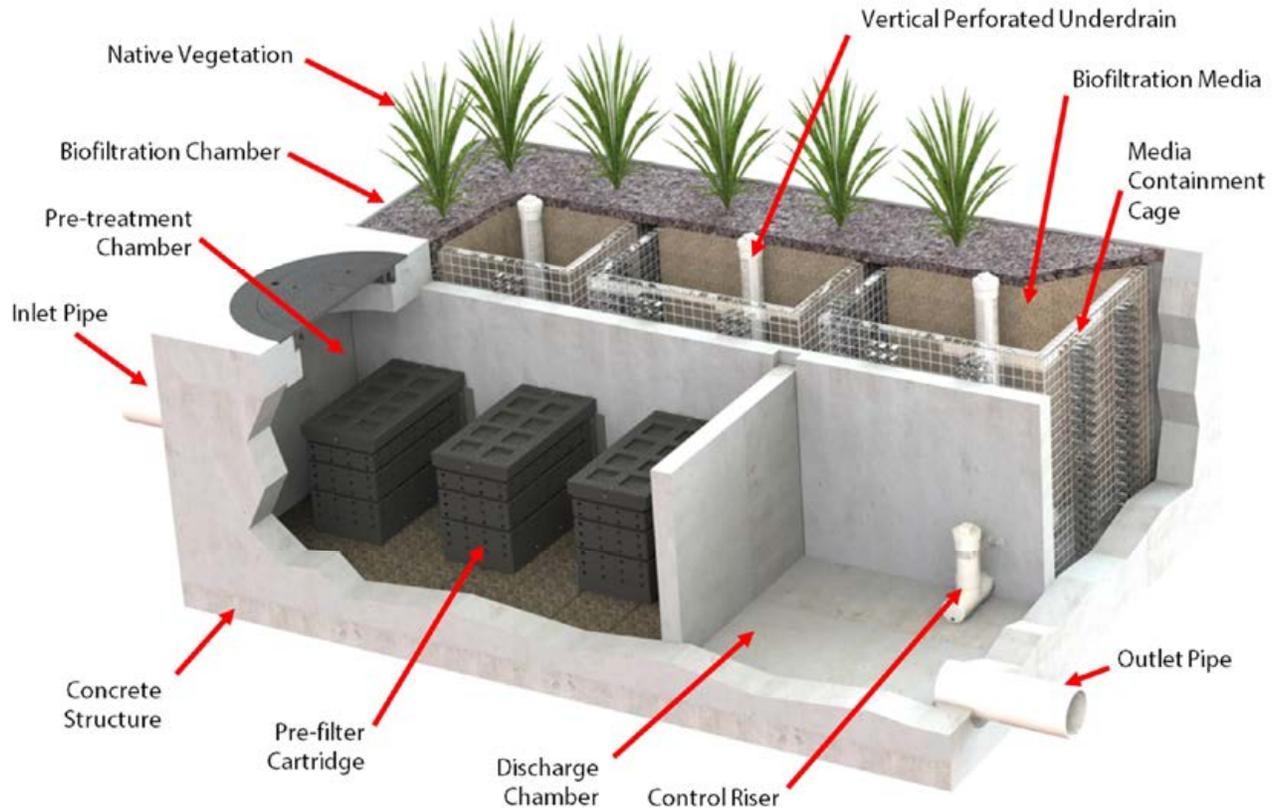

## INSPECTION SUMMARY & EQUIPMENT LIST

Stormwater regulations require BMPs be inspected and maintained to ensure they are operating as designed to allow for effective pollutant removal and provide protection to receiving water bodies. It is recommended that inspections be performed multiple times during the first year to assess the site-specific loading conditions. The first year of inspections can be used to set inspection and maintenance intervals for subsequent years to ensure appropriate maintenance is provided.

- Inspect pre-treatment, biofiltration, and discharge chambers an average of once every six to twelve months. Varies based on site specific and local conditions.
- Average inspection time is approximately 15 minutes. Always ensure appropriate safety protocol and procedures are followed.

The following is a list of equipment required to allow for simple and effective inspection of the MWL:



Modular Wetlands Linear  
Inspection Form



Flashlight



Tape Measure



Access Cover Hook



Ratchet  
& 7/16" Socket  
(if required for older pre-filter  
cartridges that have two  
bolts holding the lids on)

## INSPECTION & MAINTENANCE NOTES

1. Following maintenance and/or inspection, it is recommended that the maintenance operator prepare a maintenance/inspection record. The record should include any maintenance activities performed, amount and description of debris collected, and condition of the system and its various filter mechanisms.
2. The owner should keep maintenance/inspection record(s) for a minimum of five years from the date of maintenance. These records should be made available to the governing municipality for inspection upon request at any time.
3. Transport all debris, trash, organics, and sediments to approved facility for disposal in accordance with local and state requirements.
4. Entry into chambers may require confined space training based on state and local regulations.
5. No fertilizer shall be used in the biofiltration chamber.
6. Irrigation should be provided as recommended by manufacturer and/or landscape architect. Amount of irrigation required is dependent on plant species. Some plants may not require irrigation after initial establishment.

## INSPECTION PROCESS

1. Prepare the inspection form by writing in the necessary information including project name, location, date & time, unit number and other information (see inspection form).
2. Observe the inside of the system through the access covers. If minimal light is available and vision into the unit is impaired, utilize a flashlight to see inside the system and all chambers.
3. Look for any out of the ordinary obstructions in the inflow pipe, pre-treatment chamber, biofiltration chamber, discharge chamber or outflow pipe. Write down any observations on the inspection form.
4. Through observation and/or digital photographs, estimate the amount of trash, debris accumulated in the pre-treatment chamber. Utilizing a tape measure or measuring stick, estimate the amount of sediment in this chamber. Record this depth on the inspection form.
5. Through visual observation, inspect the condition of the pre-filter cartridges. Look for excessive build-up of sediment on the cartridges, any build-up on the tops of the cartridges, or clogging of the holes. Record this information on the inspection form. The pre-filter cartridges can be further inspected by removing the cartridge tops and assessing the color of the BioMediaGREEN filter cubes (requires entry into pre-treatment chamber - see notes previous notes regarding confined space entry). Record the color of the material. New material is a light green color. As the media becomes clogged, it will turn darker in color, eventually becoming dark brown or black. The closer to black the media is the higher percentage that the media is exhausted and in need of replacement.

New  
BioMediaGREEN  
0%

Exhausted  
BioMediaGREEN  
100%

85%



6. The biofiltration chamber is generally maintenance-free due to the system's advanced pre-treatment chamber. For units which have open planters with vegetation, it is recommended that the vegetation be inspected. Look for any plants that are dead or showing signs of disease or other negative stressors. Record the general health of the plants on the inspection form and indicate through visual observation or digital photographs if trimming of the vegetation is required.
7. The discharge chamber houses the control riser (if applicable), drain down filter (only in California - older models), and is connected to the outflow pipe. It is important to check to ensure the orifice is in proper operating condition and free of any obstructions. It is also important to assess the condition of the drain down filter media which utilizes a block form of the BioMediaGREEN. Assess in the same manner as the cubes in the pre-filter cartridge as mentioned above.
8. Finalize the inspection report for analysis by the maintenance manager to determine if maintenance is required.

## MAINTENANCE INDICATORS

Based upon the observations made during inspection, maintenance of the system may be required based on the following indicators:

- Missing or damaged internal components or cartridges.
- Obstructions in the system or its inlet and/or outlet pipes.
- Excessive accumulation of floatables in the pre-treatment chamber in which the length and width of the chamber is fully impacted more than 18".
- Excessive accumulation of sediment in the pre-treatment chamber of more than 6" in depth.
- Excessive accumulation of sediment on the BioMediaGREEN media housed within the pretreatment cartridges. When media is more than 85% clogged, replacement is required. The darker the BioMediaGREEN, the more clogged it is and in need of replacement.
- Excessive accumulation of sediment on the BioMediaGREEN media housed within the drain down filter (California only - older models).
- Overgrown vegetation.

## MAINTENANCE SUMMARY & EQUIPMENT LIST

The time has come to maintain your MWL. All necessary pre-maintenance steps must be carried out before maintenance occurs. Once traffic control has been set up per local and state regulations and access covers have been safely opened, the maintenance process can begin. It should be noted that some maintenance activities require confined space entry. All confined space requirements must be strictly followed before entry into the system. In addition, the following is recommended:

- Prepare the maintenance form by writing in the necessary information including project name, location, date & time, unit number and other info (see maintenance form).
- Set up all appropriate safety and maintenance equipment.
- Ensure traffic control is set up and properly positioned.
- Prepared pre-checks (OSHA, safety, confined space entry) are performed.
  - A gas meter should be used to detect the presence of any hazardous gases prior to entering the system. If hazardous gases are present, do not enter the vault. Following appropriate confined space procedures, take steps such as utilizing a venting system to address the hazard. Once it is determined to be safe, enter the system utilizing appropriate entry equipment such as a ladder and tripod with harness.

The following is a list of equipment required for maintenance of the MWL:



Modular Wetlands Linear Maintenance Form



Flashlight



Access Cover Hook



Ratchet & 7/16" Socket  
(if required for older pre-filter cartridges that have two bolts holding the lids on)



Vacuum Assisted Truck with Pressure Washer



Replacement BioMediaGREEN  
(If Required)


(order BioMediaGREEN from Contech's Maintenance Team members at <https://www.conteches.com/maintenance>)

## MAINTENANCE INSTRUCTIONS



### 1. ACCESS COVER REMOVAL

Upon determining that the vault is safe for entry, remove all access cover(s) and position the vacuum truck accordingly.

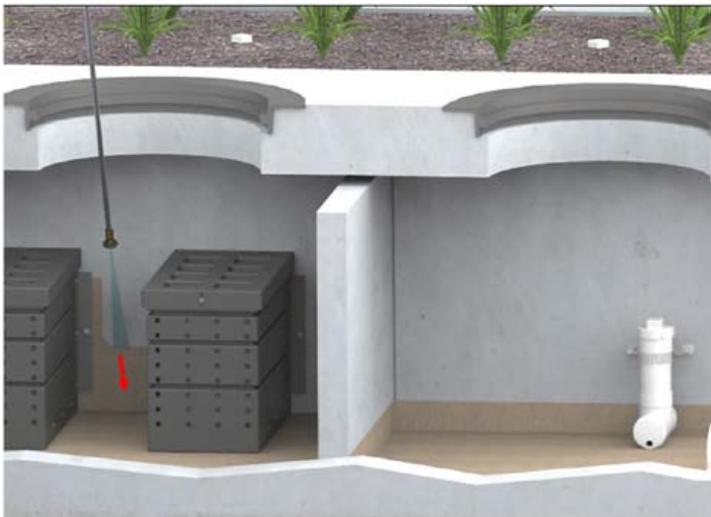

### 2. PRESSURE WASH SYSTEM CHAMBERS

With the pressure washer, spray down pollutants accumulated on the walls and floors of the pre-treatment and discharge chambers. Then wash any accumulated sediment from the pre-filter cartridge(s).



### 3. VACUUM SYSTEM CHAMBERS

Vacuum out pre-treatment and discharge chambers and remove all accumulated pollutants including trash, debris, and sediments. Be sure to vacuum the pre-treatment floor until the pervious pavers are visible and clean. **(MWL systems outside of California may or may not have pervious pavers on the floor in the pre-treatment chamber)** If pre-filter cartridges require media replacement, proceed to **Step 4**. If not, replace the access cover(s) and proceed to **Step 7**.




#### 4. PRE-FILTER CARTRIDGE LID REMOVAL

After successfully cleaning out the pre-treatment chamber, enter the chamber and remove the lid(s) from the pre-filter cartridge(s) by removing the two thumb screws. (Older pre-filter cartridges have two bolts holding the lids on that require a 7/16" socket to remove)



#### 5. VACUUM EXISTING PRE-FILTER MEDIA

Utilize the vacuum truck hose or hose extension to remove the filter media from each of the individual media cages. Once filter media has been sucked out, use a pressure washer to spray down the inside of the cartridge and its media cages. Remove cleaned media cages and place to the side. Once removed, the vacuum hose can be inserted into the cartridge to vacuum out any remaining material near the bottom of the cartridge.

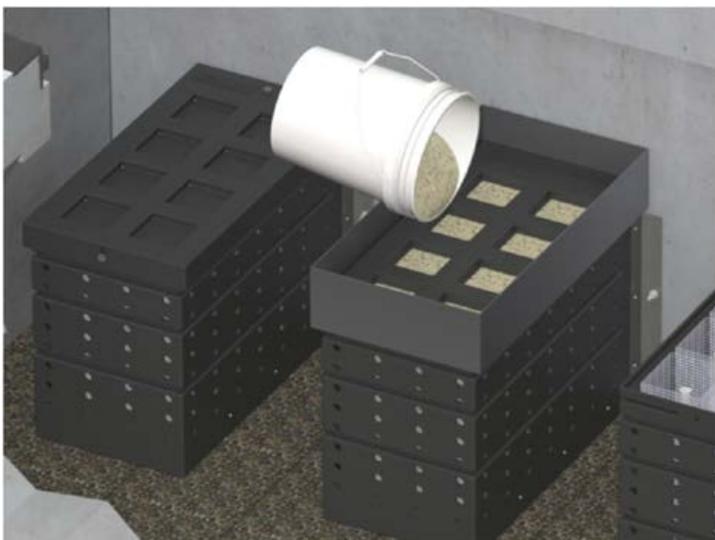

#### 6. PRE-FILTER MEDIA REPLACEMENT

Reinstall media cages and fill with new media from the manufacturer or outside supplier. Manufacturer will provide specification of media and sources to purchase. The easiest way to fill the media cages is to utilize a refilling tray that can also be sourced from the manufacturer. Place the refilling tray on top of the cartridge and fill with new bulk media shaking it down into the cages. Using your hands, lightly compact the media into each filter cage. Once the cages are full (each cartridge will hold five heaping 5gal buckets of bulk media), remove the refilling tray and replace the cartridge top, ensuring fasteners are properly tightened.



## 7. MAINTAINING VEGETATION

In general, the biofiltration chamber is maintenance-free with the exception of maintaining the vegetation. The MWL utilizes vegetation similar to surrounding landscape areas, therefore, trim vegetation to match surrounding vegetation. If any plants have died, replace them with new ones.



## 8. INSPECT UNDERDRAIN SYSTEM

Each vertical under drain on the biofiltration chamber has a removable threaded cap that can be taken off to check for any blockages or root growth. Once removed, a jetting attachment to the pressure washer can be used to clean out the under drain and orifice riser if needed.



## 9. REPLACE ACCESS COVERS

Once maintenance is complete, replace all access cover(s)

## REPLACING BIOFILTRATION MEDIA IF REQUIRED

As with all biofilter systems, at some point the biofiltration media will need to be replaced, either due to physical clogging or sorptive exhaustion (for dissolved pollutants) of the media ion exchange capacity (to remove dissolved metals and phosphorous). The general life of this media is 10 to 20 years based on site specific conditions and pollutant loading, so replacing the biofiltration media should not be a common occurrence. In the event that the biofiltration media requires replacement, contact one of Contech's Maintenance Team members at <https://www.conteches.com/maintenance> to order new biofiltration media. The quantity of media needed can be determined by providing the model number and unit depth. Media will be provided in super sacks for easy installation. Each sack will weigh between 1,000 and 2,000 lbs. Biofiltration media replacement can be done following the steps below:



### 1. VACUUM EXISTING BIOFILTRATION MEDIA

Remove the mulch and vegetation to access the biofiltration media, and then position the vacuum truck accordingly. Utilize the vacuum truck to vacuum out all the media. Once all media is removed, use the pressure washer to spray down all the netting and underdrain systems on the inside of the media containment cage. Vacuum out any remaining debris after spraying down netting. Inspect the netting for any damage or holes. If the netting is damaged, it can be repaired or replaced with guidance by the manufacturer.



### 2. INSTALLING NEW BIOFILTRATION MEDIA

Ensure that the chamber is fully cleaned prior to installation of new media into the media containment cage(s). Media will be provided in super sacks for easy installation. A lifting apparatus (forklift, backhoe, boom truck, or other) is recommended to position the super sack over the biofiltration chamber. Add media in lifts to ensure that the riser pipes remain vertical. Be sure to only fill the media cage(s) up to the same level as the old media.

### 3. REPLANT VEGETATION

Once the media has been replaced, replant the vegetation and cover biofiltration chamber with approved mulch (if applicable). If the existing vegetation is not being reused, and new vegetation is being planted, you will need to acquire new plant establishment media that will be installed just below the mulch layer at each plant location. (see plan drawings for details). Contact one of Contech's Maintenance Team members at <https://www.conteches.com/maintenance> to order new plant establishment media.



## REPLACING DRAIN DOWN FILTER MEDIA (ONLY ON OLDER CALIFORNIA MODELS)


**NOTE: The drain down filter is only found on units installed in California prior to 2023**

If during inspection it was determined that the drain down filter media requires replacement, contact one of Contech's Maintenance Team members at <https://www.conteches.com/maintenance> to order new media.



### 1. REMOVE EXISTING DRAIN DOWN MEDIA

Pull knob back to unlock the locking mechanism and lift the drain down filter housing to remove the used BioMediaGREEN filter block.

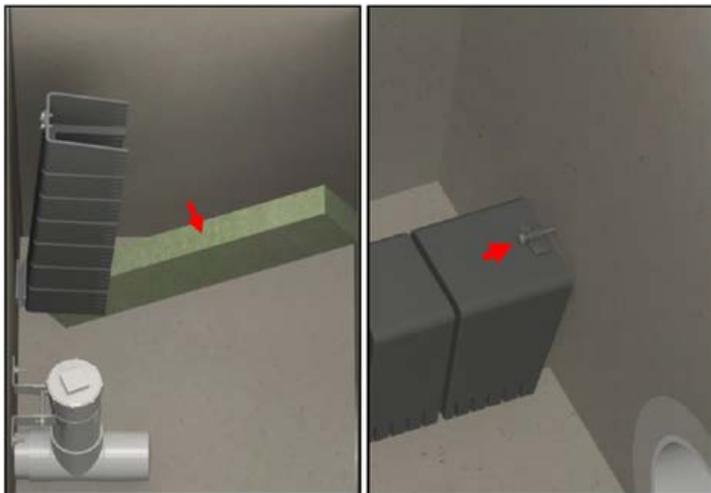

### 2. INSTALL NEW DRAIN DOWN MEDIA

Ensure that the chamber and housing are fully cleaned prior to installation of new media, and then insert the new BioMediaGREEN filter block. The media filter block should fit snugly between the chamber walls and be centered under the filter housing. Lower the housing over the filter block and secure the locking mechanism.





## Inspection Report Modular Wetlands Linear

Project Name \_\_\_\_\_

For Office Use Only
(Reviewed By) _____
(Date) _____ Office personnel to complete section to the left.

Project Address \_\_\_\_\_ (city) (Zip Code)

Owner / Management Company \_\_\_\_\_

Contact \_\_\_\_\_ Phone ( ) - \_\_\_\_\_

Inspector Name \_\_\_\_\_ Date \_\_\_\_ / \_\_\_\_ / \_\_\_\_\_ Time \_\_\_\_\_ AM / PM

Type of Inspection    Routine    Follow Up    Complaint    Storm   Storm Event in Last 72-hours?    No    Yes

Weather Condition \_\_\_\_\_ Additional Notes \_\_\_\_\_

### Inspection Checklist

Modular Wetland System Type (Curb, Grate or UG Vault): \_\_\_\_\_ Size (22', 14' or etc.): \_\_\_\_\_

Structural Integrity:	Yes	No	Comments
Damage to pre-treatment access cover (manhole cover/grate) or cannot be opened using normal lifting pressure?			
Damage to discharge chamber access cover (manhole cover/grate) or cannot be opened using normal lifting pressure?			
Does the MWS unit show signs of structural deterioration (cracks in the wall, damage to frame)?			
Is the inlet/outlet pipe or drain down pipe damaged or otherwise not functioning properly?			
<b>Working Condition:</b>			
Is there evidence of illicit discharge or excessive oil, grease, or other automobile fluids entering and clogging the unit?			
Is there standing water in inappropriate areas after a dry period?			
Is the filter insert (if applicable) at capacity and/or is there an accumulation of debris/trash on the shelf system?			
Does the depth of sediment/trash/debris suggest a blockage of the inflow pipe, bypass or cartridge filter? If yes specify which one in the comments section. Note depth of accumulation in in pre-treatment chamber.			Depth: _____
Does the cartridge filter media need replacement in pre-treatment chamber and/or discharge chamber?			Chamber: _____
Any signs of improper functioning in the discharge chamber? Note issues in comments section.			
<b>Other Inspection Items:</b>			
Is there an accumulation of sediment/trash/debris in the wetland media (if applicable)?			
Is it evident that the plants are alive and healthy (if applicable)? Please note Plant Information below.			
Is there a septic or foul odor coming from inside the system?			

Waste:	Yes	No
Sediment / Silt / Clay		
Trash / Bags / Bottles		
Green Waste / Leaves / Foliage		

Recommended Maintenance	
No Cleaning Needed	
Schedule Maintenance as Planned	
Needs Immediate Maintenance	

Plant Information	
Damage to Plants	
Plant Replacement	
Plant Trimming	

Additional Notes: \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_



## Cleaning and Maintenance Report Modular Wetlands Linear

Project Name \_\_\_\_\_

Project Address \_\_\_\_\_  
(city) (Zip Code)

Owner / Management Company \_\_\_\_\_

Contact \_\_\_\_\_

Phone (       ) - \_\_\_\_\_

Inspector Name \_\_\_\_\_

Date \_\_\_\_ / \_\_\_\_ / \_\_\_\_ Time \_\_\_\_\_ AM / PM

Type of Inspection     Routine     Follow Up     Complaint

Storm                      Storm Event in Last 72-hours?     No     Yes

Weather Condition \_\_\_\_\_

Additional Notes \_\_\_\_\_

For Office Use Only

---

(Reviewed By) \_\_\_\_\_

---

(Date) \_\_\_\_\_  
 Office personnel to complete section to the left.

Site Map #	GPS Coordinates of Insert	Manufacturer / Description / Sizing	Trash Accumulation	Foliage Accumulation	Sediment Accumulation	Total Debris Accumulation	Condition of Media 25/50/75/100 (will be changed @ 75%)	Operational Per Manufactures' Specifications (If not, why?)
	Lat: _____ Long: _____	MWS Catch Basins						
		MWS Sedimentation Basin						
		Media Filter Condition						
		Plant Condition						
		Drain Down Media Condition						
		Discharge Chamber Condition						
		Drain Down Pipe Condition						
		Inlet and Outlet Pipe Condition						

Comments: \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_



# **CONTECH**<sup>®</sup> ENGINEERED SOLUTIONS

© 2024 CONTECH ENGINEERED SOLUTIONS LLC, A QUIKRETE COMPANY

800-338-1122

[WWW.CONTECHES.COM](http://WWW.CONTECHES.COM)

ALL RIGHTS RESERVED. PRINTED IN THE USA.

CONTECH ENGINEERED SOLUTIONS LLC PROVIDES SITE SOLUTIONS FOR THE CIVIL ENGINEERING INDUSTRY. CONTECH'S PORTFOLIO INCLUDES BRIDGES, DRAINAGE, SANITARY SEWER, STORMWATER AND EARTH STABILIZATION PRODUCTS. FOR INFORMATION ON OTHER CONTECH DIVISION OFFERINGS, VISIT [CONTECHES.COM](http://CONTECHES.COM) OR CALL 800-338-1122.

NOTHING IN THIS CATALOG SHOULD BE CONSTRUED AS A WARRANTY. APPLICATIONS SUGGESTED HEREIN ARE DESCRIBED ONLY TO HELP READERS MAKE THEIR OWN EVALUATIONS AND DECISIONS, AND ARE NEITHER GUARANTEES NOR WARRANTIES OF SUITABILITY FOR ANY APPLICATION. CONTECH MAKES NO WARRANTY WHATSOEVER, EXPRESS OR IMPLIED, RELATED TO THE APPLICATIONS, MATERIALS, COATINGS, OR PRODUCTS DISCUSSED HEREIN. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND ALL IMPLIED WARRANTIES OF FITNESS FOR ANY PARTICULAR PURPOSE ARE DISCLAIMED BY CONTECH. SEE CONTECH'S CONDITIONS OF SALE (AVAILABLE AT [WWW.CONTECHES.COM/COS](http://WWW.CONTECHES.COM/COS)) FOR MORE INFORMATION.

## **SUPPORT**

DRAWINGS AND SPECIFICATIONS ARE AVAILABLE AT [WWW.CONTECHES.COM](http://WWW.CONTECHES.COM)

ModWetLinear OM Manual 03/24